

Globe Architectural and Metal can provide installation guides with all interiors. The majority of products supplied by Globe are easily installed with the use of sub walls and pre-fixed wall panel clips. Please feel free to request an installation guide for your project at any time.

# Installation Guide Example

Side Wall Veneer Panels

Globe Architectural and Metal

---

Please see the following example of previous installation instructions provided by Globe.



**Photo 1**

Z clips are attached to the side wall shell at the rear. These clips are what the first panel hook on to.

First mount the base board to maintain panel alignment off the floor. Once the first panel is on the z clips, use two 1/4" Masonite spacers to achieve the 1/2" spacing from the rear shell. After the panel is snug to all spacers and properly mounted screw in the aluminum bracketing. (locations shown in photo 2)

screw locations to be  
pilot drilled and fastened



**Photo 2**


This image shows the screw locations to be fastened down on the wall panel attached bracketing.  
Fasten all screw locations.



**Photo 3**



**Photo 4**

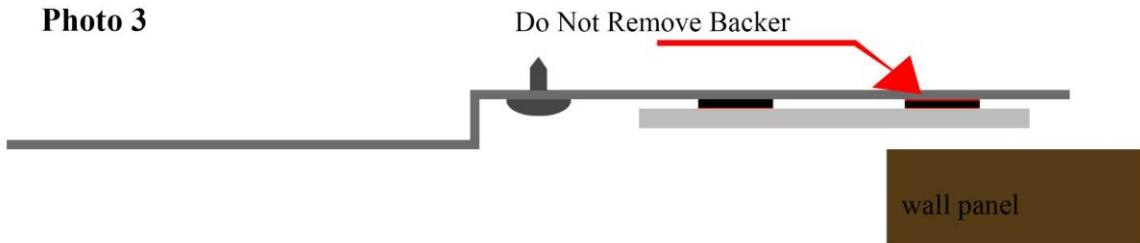

After the wall panel and bracketing is secured, remove the reveal protective surface and install. The inner vertical reveals will be supplied with two pieces of high-bond adhesive tape. Only remove the outside strip of tape backer. If both of the tape backers are removed the reveal will not properly slide into place before sticking.

The inner vertical reveals should butt tight to the frieze reveal or overlap slightly.



**Photo 5**

Photo 5 shows the second wall panel installed with a 1/4 spacer in-between the panels.  
All wall panels are to be fit with a spacer added for panel alignment.



**Photo 6**

Continue the process of securing all properly spaced wall panels and adding inner vertical reveals.



**Photo 7**

Note: The second to last wall panel will have slightly different bracketing. This bracketing needs to be fastened with the typical screw next to the inner vertical reveal, and a counter sunk screw near the bracketing lead edge (front wall side). The counter sunk screw must be flush or the forward most wall panel will not mount properly into the bracketing.



**Photo 8**

Mounting the final, forward most, side wall panel can be done once the reveal and bracketing is securely installed to the shell. This panel should have a drop of silicone added to the clips. This is added because it will help hold the forward panel in place while the other panels are mechanically fixed in position.





**Photo 9**

Finally, all spacers can be removed. Once the panels are in location and properly aligned the handrail bracketing locations can be drilled. These hole locations are punched in the shells. It is recommended that a pilot hole is drilled from the exterior of the shell at the punched handrail bracketing locations. These locations include the proper spacers for secure bracket mounting.

**For all questions and inquiries please call Globe at 262-250-1120**